

## Penn Reel Parts list for: Model: 103CS

| KEY  | PART      |                                   | KEY | PART      |                                 |
|------|-----------|-----------------------------------|-----|-----------|---------------------------------|
| NO   | NO.       | DESCRIPTION                       | NO  | NO.       | DESCRIPTION                     |
| 1    | 1-103CS   | HOUSING W/BUSHING & EMBLEM        | 32  | 32-103    | BAIL SPRING                     |
| 2    | 2-103     | HOUSING BUSHING ( uses 2 )        | 34  | 34-103CS  | BAIL ARM                        |
| 3    | 3-103     | DOG MOUNTING SCREW                | 34A | 34A-103   | BAIL ARM SPACER ( uses 2 )      |
| 4    | 4-103C    | DOG                               | 35  | 35-103CS  | LINE ROLLER                     |
| 4A   | 4A-103CS  | DOG SPRING                        | 35A | 35A-103CS | LINE ROLLER BUSHING             |
| 6A   | 6A-103CS  | ECCENTRIC                         | 36  | 36-103CS  | BAIL STUD SCREW                 |
| 6D   | 6D-103    | ECCENTRIC SPRING                  | 36A | 36A-103   | LOCK WASHER ( uses 2 )          |
| 6E   | 6E-103    | ECCENTRIC LEVER                   | 38  | 38-103    | ROTOR NUT                       |
| 6F   | 6F-101    | ECCENTRIC LEVER MOUNTING SCREW    | 38A | 38A-103CS | ROTOR NUT SCREW                 |
| 8    | 8-103C    | MAIN GEAR ASSEMBLY                | 39  | 39-103C   | CROSSWIND SHAFT                 |
| 8A   | 8A-103    | MAIN GEAR SHIM                    | 40B | 40B-103   | CLICK RATCHET                   |
| 10   | 10-103C   | ANTI-REVERSE RATCHET              | 43  | 43-103    | CROSSWIND ARM                   |
| 15   | 15-103    | HANDLE                            | 43A | 43A-103CS | CROSSWIND BLOCK                 |
| 15B  | 15B-103   | HANDLE SHAFT                      | 44  | 44-103C   | CROSSWIND ARM PIN               |
| 15C  | 15C-103   | HANDLE PIVOT PIN                  | 45  | 45-103CS  | HOUSING COVER W/BUSHING         |
| 16   | 16-103    | HANDLE COLLAR                     | 46  | 46-103    | HOUSING COVER SCREW ( uses 4 )  |
| 19   | 19-103C   | PINION GEAR                       | 46A | 46A-103   | ROTOR END COVER SCREW (uses 2)  |
| 19A  | 19A-103C  | PINION GEAR SPACER                | 47  | 47-103CS  | SPOOL (COMPLETE)                |
| 20   | 20-103    | BALL BEARING                      | 48  | 48-103CS  | CLICK TONGUE                    |
| 21   | 21-103C   | BEARING COVER                     | 49  | 49-103CS  | CLICK SPRING                    |
| 23   | 23-103    | BEARING COVER SCREW ( uses 2 )    | 49A | 22-103CS  | CLICK SPRING SCREW              |
| 24   | 24-103CS  | BAIL WIRE                         | 51  | 51-103    | RETAINING RING                  |
| 27   | 27-103CS  | ROTOR CUP                         | 52  | 52-103CS  | DRAG KNOB                       |
| 27A  | 27A-103   | ROTOR END COVER                   | 56  | 56T-103   | DRAG WASHER (TEFLON) ( uses 3 ) |
| 27E  | 27E-103CS | BALANCE WEIGHT                    | 57  | 57-103    | DRAG WASHER (KEYED) ( uses 2 )  |
| 27F  | 27F-103CS | BALANCE WEIGHT SCREW              | 58  | 58-103    | DRAG WASHER (EAR)               |
| 27NS | 27NS***   | SMALL CURVED WEIGHT, NOT SERVICED | 60  | 60-103    | THRUST WASHER (TEFLON)          |
| 28   | 28-103    | TRIP LEVER                        | 106 | 106-103   | CAM LEVER SPRING                |
| 28A  | 28A-103   | CAM LEVER                         | 132 | 132-103CS | ROLLER WASHER                   |
| 28B  | 28B-103   | CAM LEVER MOUNTING SCREW          | 227 | 227-103   | BAIL SPRING COVER               |
| 28C  | 28C-103   | TRIP CAM                          | 230 | 230-103C  | SILENT DOG SPRING               |
| 28D  | 46A-103   | CAM MOUNT SCREW                   | 233 | 233-103   | HOUSING HANDLE CAP              |
| 31   | 31-103    | BAIL ARM SCREW ( uses 2 )         |     |           |                                 |

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.

SBT Ver. 092609

27NS\*\*\* This is the small curved weight pressed into the rotor cup on the side with the bail spring, underneath where the bail wire screws onto the rotor.

It is a factory glued in part and is not serviced by Penn.