

**411 950M Instructions, Installation Kit 950M
For Drag Conversion Kit 000P006950MSP
Replacement of 9500SS Drag system with new 950SSm Drag system**

Note: To identify which drag system is installed in a reel, remove the spool and look inside. See Figures 1 and 2.

The older 9500SS drag system has a **black** drive plate



Figure 1

The new 950SSm drag system has a **gold** drive plate.

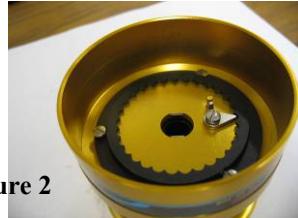


Figure 2

1. Disassemble the 047C9500 Drag Cover by removing the 3 screws. Set this aside as it will be re-used.
2. Lift the black Drive Plate Assembly from the inside of the Spool
3. Remove the Spool Click Screw and the Click Spring, Click Tongue, and Click Bushing from the Drive Plate Assembly. Set these parts aside as they will be re-used. See Figure 3.
4. Remove the Metal Drag Washer from inside the Spool, and discard along with the black Drive Plate Assembly.
5. Assemble the Click components to the new gold Drive Plate Assembly (117 950M).
 - a. Place the Click Tongue over the hub of the Click Bushing.
 - b. Place the Spring over the Click Bushing hub, and insert the Screw through the Bushing and into the Drive Plate.
 - c. Lift the Spring legs so that they straddle the pin and the bent tab. See Figure 5.



Figure 3


Figure 4



**Figure 5
Spring Legs**



**Figure 6
Tabs**

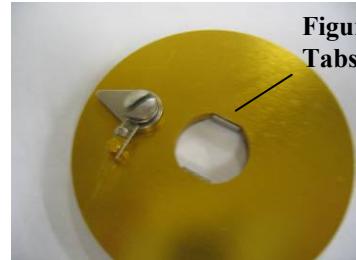

6. Place the new HT100 Drag Washer (006 950M) inside the Spool, lining up the tabs.
7. Place the gold Drive Plate Assembly over the Metal Drag Washer (007 950M) with the tabs inserted into the keyed bore. See Figure 6.
8. Place the gold Drive Plate Assembly and Metal Drag Washer over the HT-100 Washer in the Spool, with the Click Tongue facing out..
9. Place the Drag Cover from the old drag system over the gold Drive Plate Assembly and tighten the screws.